

## Chromebooks | Adjusting the Display Settings

1. To make a specific page bigger, press the following keys:  
"Ctrl" and "+"  
(plus symbol)



2. To make a specific page smaller, press the following keys:  
"Ctrl" and "-"  
(minus symbol)



3. To reset the zoom on a specific page, press the following keys:  
"Ctrl" and "o"  
(the number)



4. To make everything on your screen bigger, press the following keys:  
"Ctrl" and "Shift" and "+"  
(plus symbol)



5. To make everything on your screen smaller, press the following keys:

“Ctrl” and “Shift” and “-” (minus symbol)



6. To reset the resolution of everything on your screen, press the following keys:

“Ctrl” and “Shift” and “o” (the number)



7. To rotate the screen of your Chromebook by 90 degrees, press the following keys:

“Ctrl” and “Shift” and the “**C**” symbol. Each time you press this combination, the screen will rotate another 90 degrees.

